


Infant Optics DXR-8 Quick Start Guide


Please refer to the User Manual for a full explanation of features and instructions of this product.

1 Setting Up your Video Monitoring System


- 1 Connect the Camera Power Adapter to the Camera Unit and an electrical outlet.

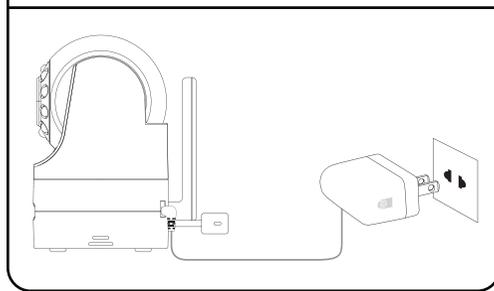

- 2 Insert the wire tab of the Rechargeable Li-ion Battery into the contact slots as shown, and fit the battery into the compartment.

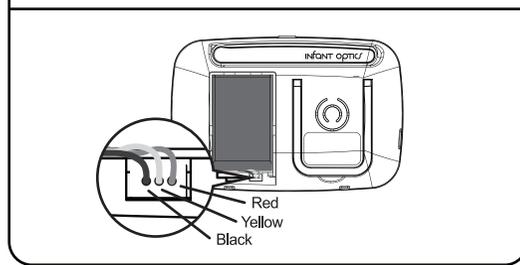

- 3 Plug either one of the USB Power Cables into a USB output from your computer, or the USB Output Adapter (included). Connect the small end of the USB Power Cable to the USB DC Jack on the Monitor Unit as shown.

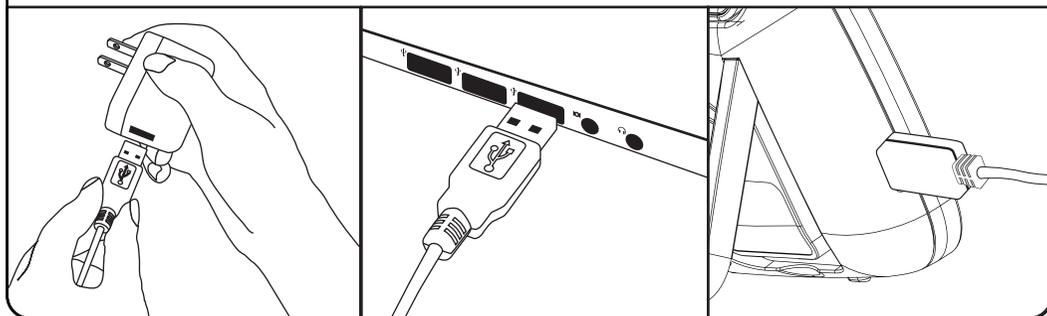

2 Basic Operation of Keys

Parent Unit	Description
POWER ON / OFF / SLEEP button	Long-hold (2 seconds) button to switch on and off. (WHEN UNIT IS ON) Short press to enter to sleep mode (video off, audio on mode).
UP / DOWN / LEFT / RIGHT button	Press to pan Camera Unit viewing direction. (IN MENU: Press to move menu selection cursor.)
MENU button	Press to open menu options or exit.
OK button	Press to cycle cam channels. (IN MENU: Press to confirm selection.)
SHORT-CUT button	Press to activate SHORT-CUT bar.
TALK button	Press and hold to talk to your baby.


3 Optical Lens Accessories

Refer to User Manual for more information.

Lens Type	Image	Description
Aluminum Lens Hood (default out of box)		Aluminum lens hood cover to protect camera lens. No special video effects. Recommended for normal settings.
Optical Zoom Lens		Telephoto lens zooms inward, resulting in objects appearing closer and enhancing the detail of objects at further distances. Recommended when Camera Unit is set up at a greater distance away from crib.
Optical Wide Angle Lens (sold separately)		Zooms image outwards, allowing greater peripheral vision. Provides wide angle vision. Results in slight distortion and reduced clarity. Recommended for room activity surveillance.

! WARNING: STRANGULATION HAZARD

STRANGULATION HAZARD - Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen. Secure cord away from child's reach. Only use the adapters provided.

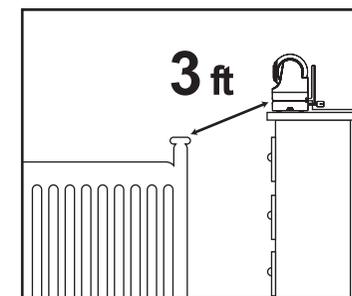

! CHOKING HAZARD:

The Optical Lens (and Lens Hood) are small parts. Keep Camera Unit away from baby's reach at all times.